

INSTRUCTIONS:




1. Cut template on the dashed line
2. Fit the template on the snorkel and make sure all the holes are accurate
3. Now fit template to vehicle as indicated
4. Drill holes as indicated
5. File the hole until the snorkel fits
6. Fit snorkel to position
7. Do not overtighten bolts

REMEMBER. THIS TEMPLATE IS A GUIDE ONLY. MAKE SURE OF THE POSITION OF THE HOLES BEFORE YOU DRILL.

STH25A

LINE UP WITH TOP OF FENDER

LINE UP WITH LEFT

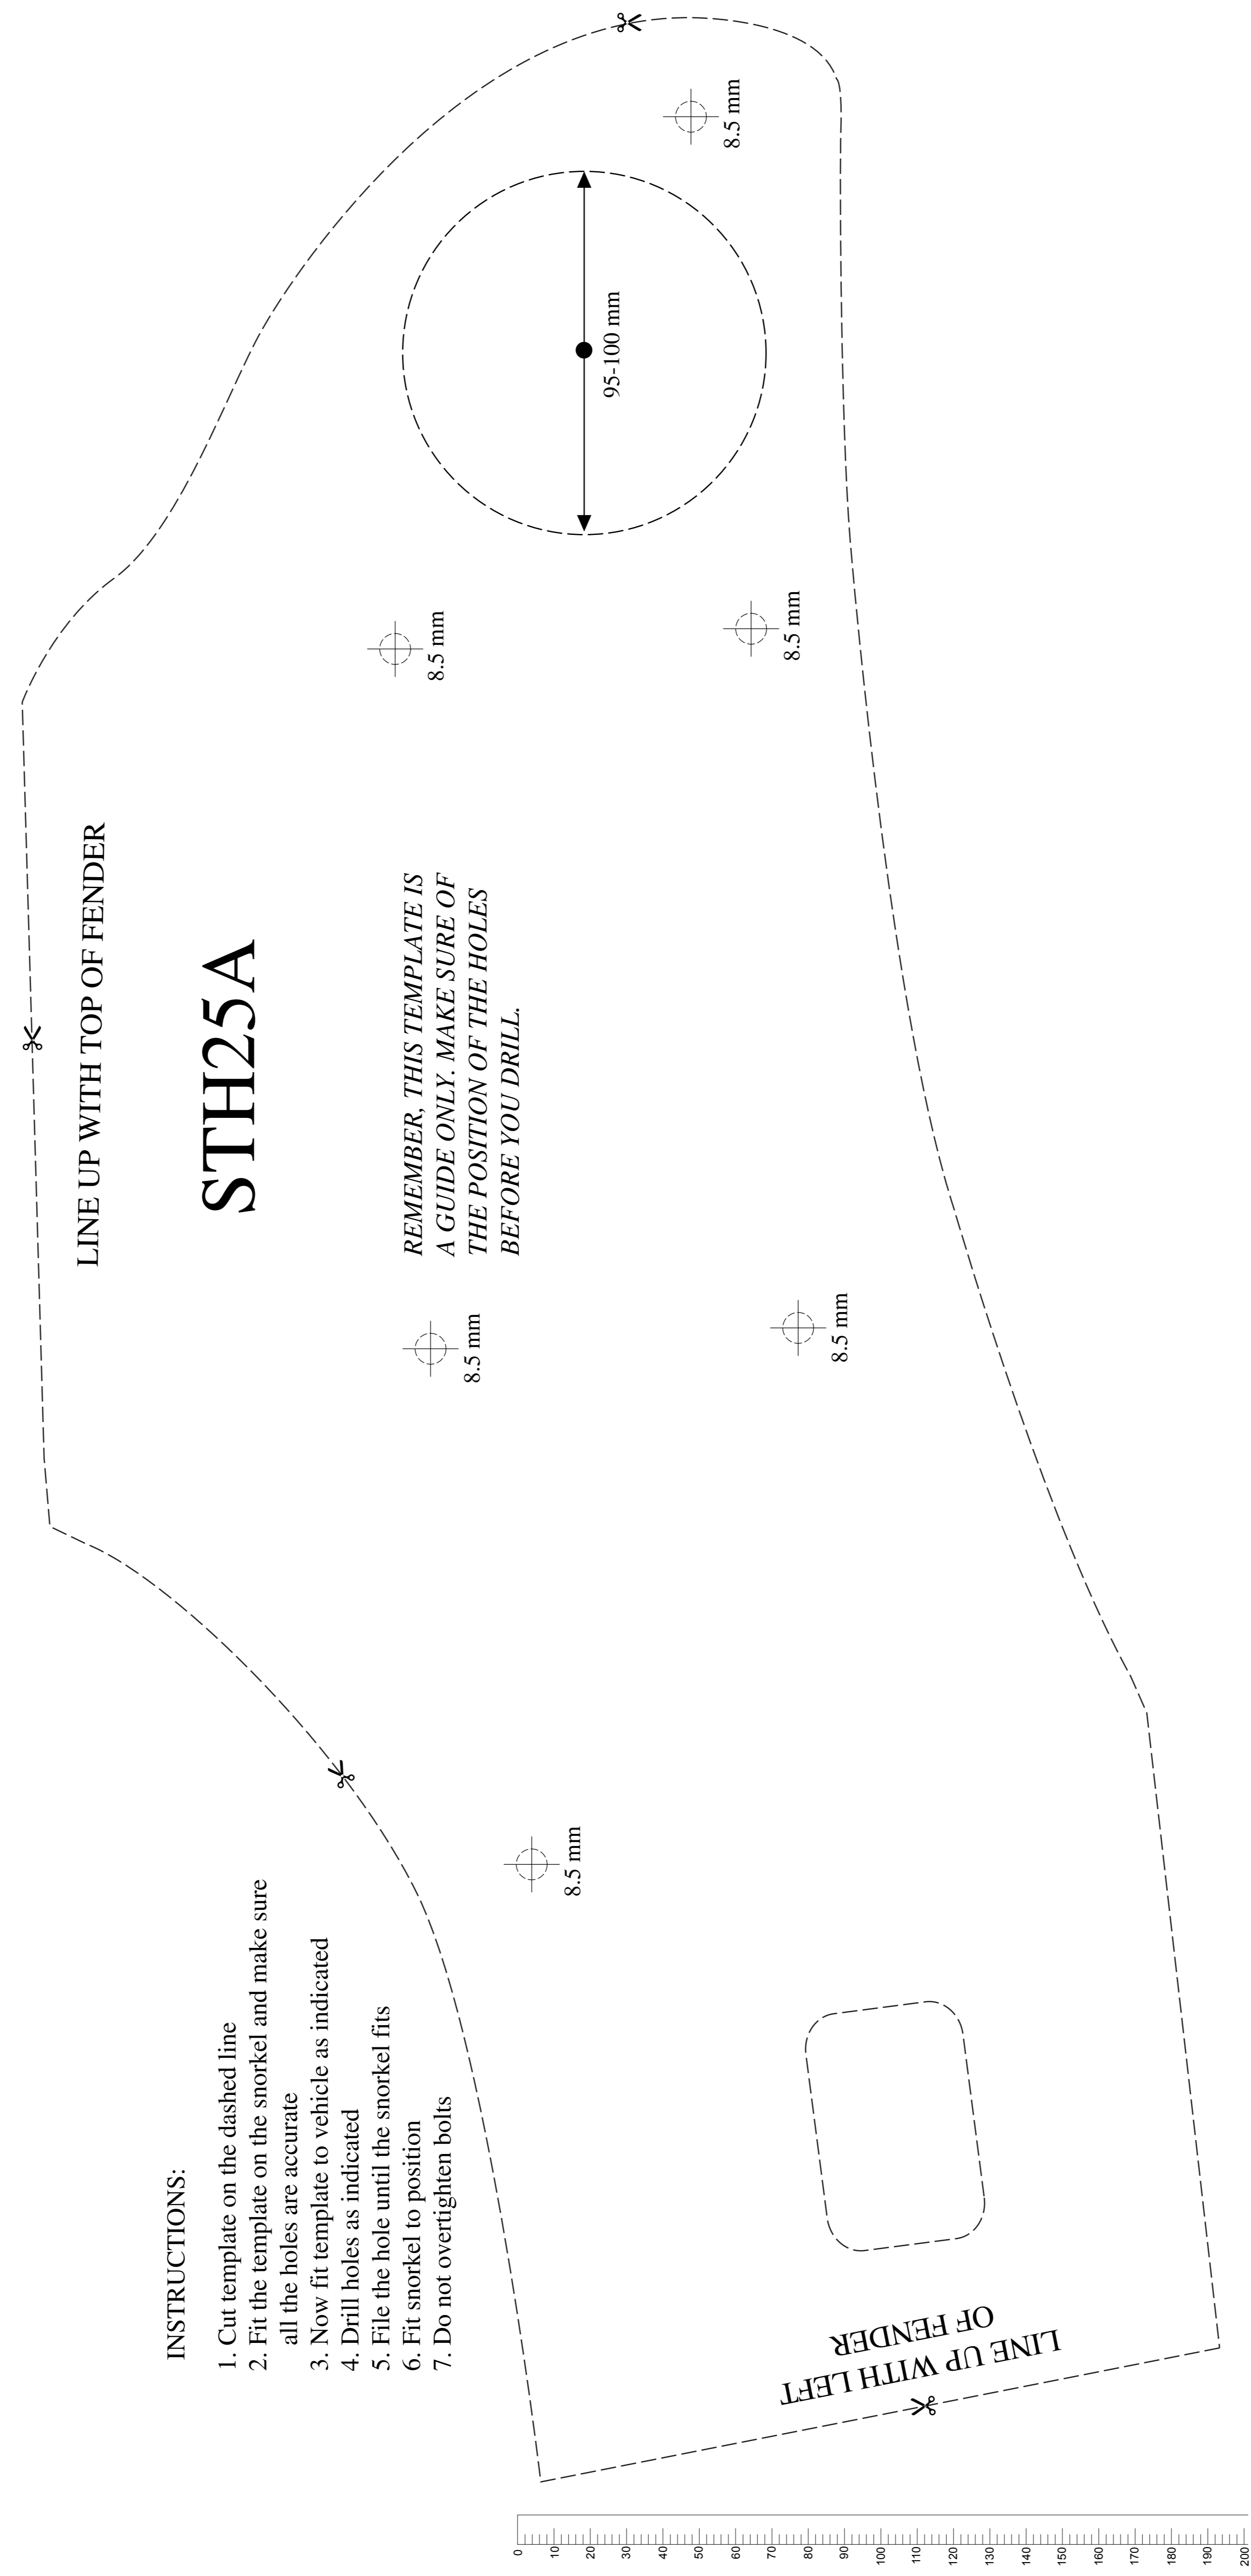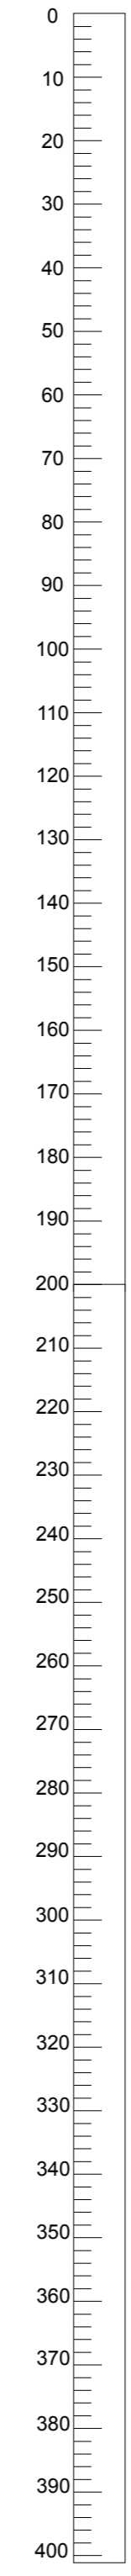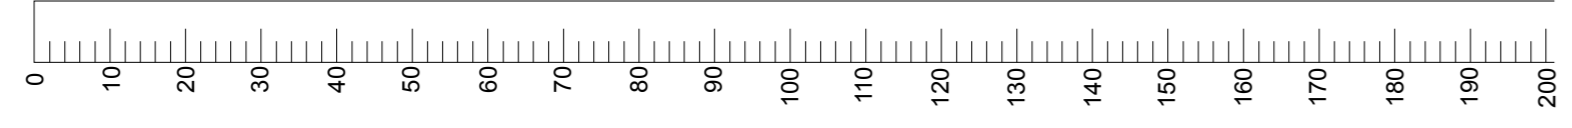

INSTRUCTIONS:




1. Cut template on the dashed line
2. Fit the template on the snorkel and make sure all the holes are accurate
3. Now fit template to vehicle as indicated
4. Drill holes as indicated
5. File the hole until the snorkel fits
6. Fit snorkel to position
7. Do not overtighten bolts

REMEMBER. THIS TEMPLATE IS A GUIDE ONLY. MAKE SURE OF THE POSITION OF THE HOLES BEFORE YOU DRILL.

STH25A

LINE UP WITH TOP OF FENDER

LINE UP WITH LEFT

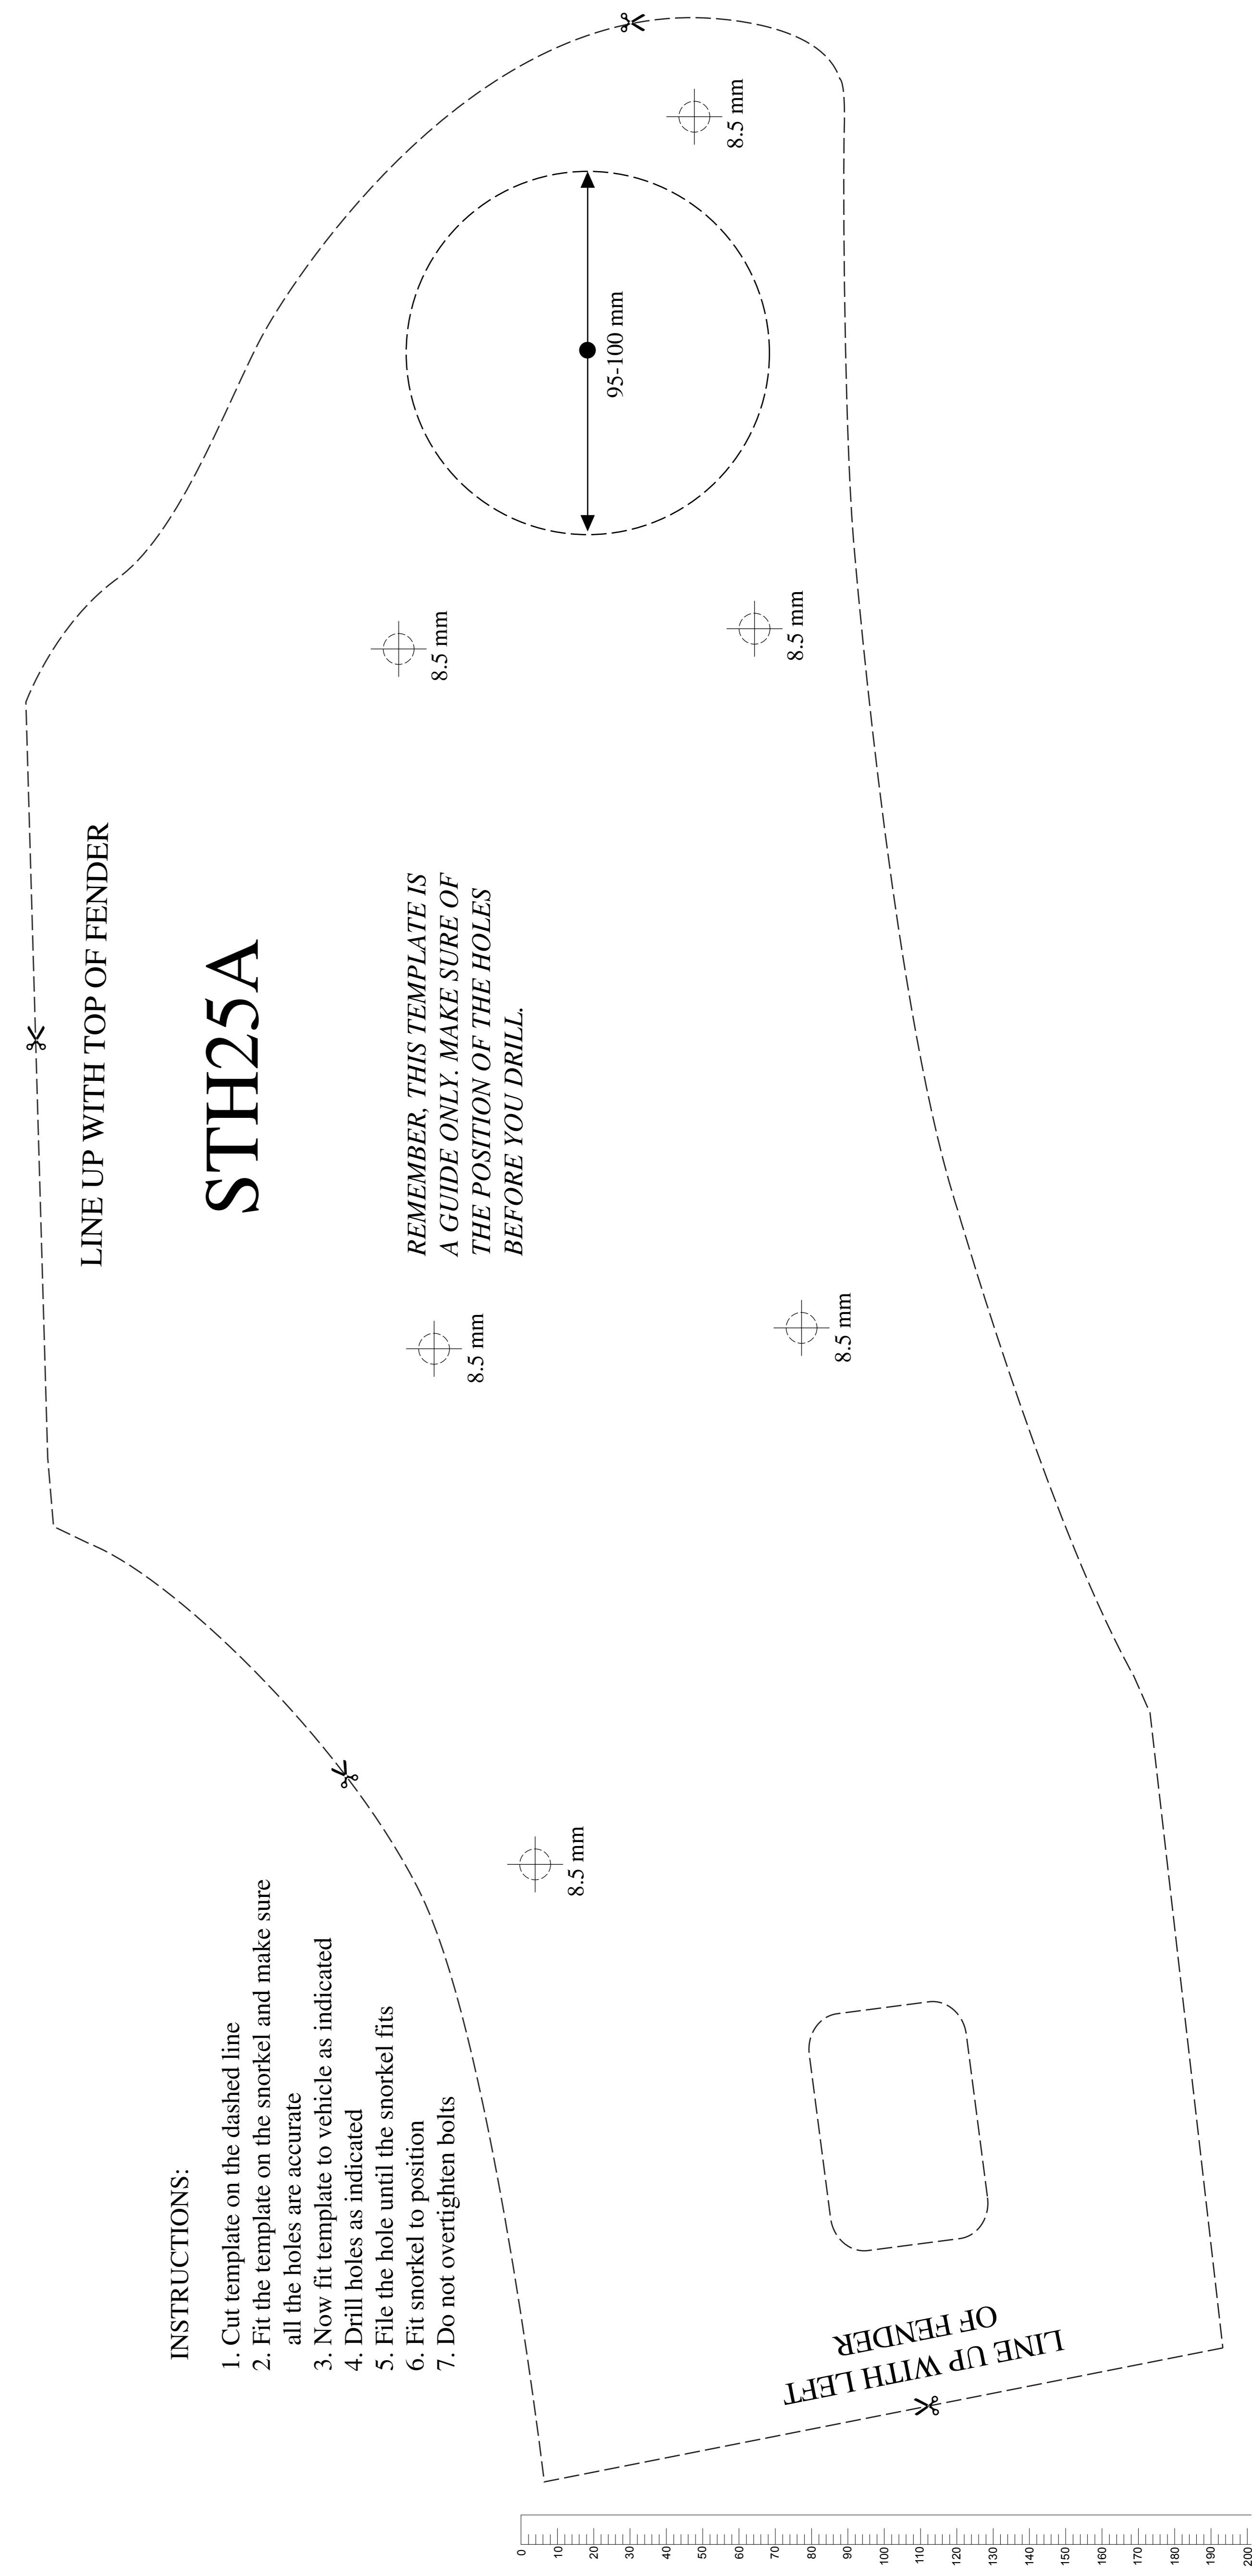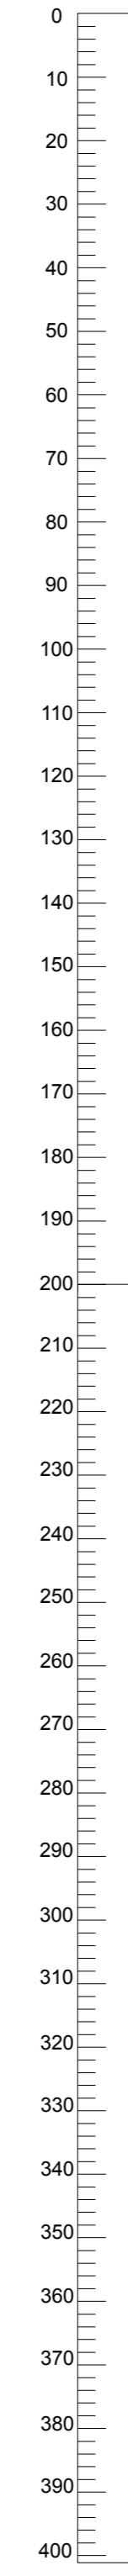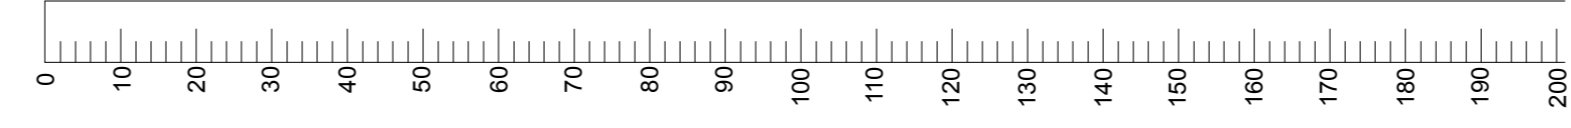

INSTRUCTIONS:

1. Cut template on the dashed line
2. Fit the template on the snorkel and make sure all the holes are accurate
3. Now fit template to vehicle as indicated
4. Drill holes as indicated
5. File the hole until the snorkel fits
6. Fit snorkel to position
7. Do not overtighten bolts

REMEMBER. THIS TEMPLATE IS A GUIDE ONLY. MAKE SURE OF THE POSITION OF THE HOLES BEFORE YOU DRILL.

STH25A

LINE UP WITH TOP OF FENDER

LINE UP WITH LEFT

